

INSTALLATION GUIDE



Cold Air Intake

1994-2002 Dodge 5.9L Cummins

(Install Time: 1 hour)





DISCLAIMER

1) By installing this product onto your vehicle, you assume all risk and liability associated with its use.


2) It is your responsibility to make sure your vehicle complies with all federal, state, and local emissions laws. Federal and many state and local laws prohibit the removal, modification or rendering in-operative of any part of the design affecting emissions or safety on motor vehicles used on a public street or highway. Violation may result in a fine of up to \$32,500 per vehicle (or possibly higher depending on changes in the law). All civil penalties and fines for removing your vehicle's emissions equipment are the sole responsibility of the end user.

3) Due to its high performance nature, this product may void vehicle manufacturer's warranty.

4) Sinister Mfg Company, Inc. is not responsible for misuse of its products. By installing this product, you release Sinister Mfg Company, Inc. of any and all liability associated with its use.

5) Depending on where you live, restrictions may apply. Check all applicable laws before installing or using!

6) The purchaser and end user releases, indemnifies, discharges and holds harmless Sinister Mfg Company, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Sinister Mfg Company, Inc. will not be liable for any direct, indirect, consequential, punitive, statutory, or incidental damages or fines caused by the use or installation of this product.

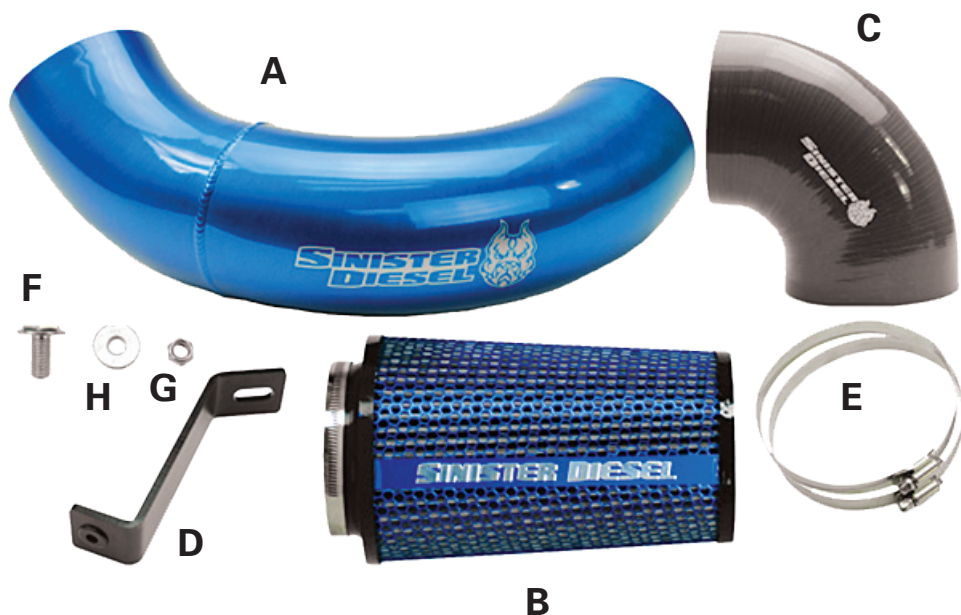

PART:	DESCRIPTION:	QTY:
A	Intake Tube	1
B	Filter w/ Clamp	1
C	Intake Boot	1
D	Support Bracket	1
E	Boot Clamp	2
F	M8 Flanged Hex Head Bolt	1
G	M6 Nylock Nut	1
H	M6 Fender Washer	1

IMPORTANT: READ ALL INSTRUCTIONS PRIOR TO INSTALL. Prior to installation, please compare the parts that you have received with the bill of materials provided on this page to assure that you have all the parts necessary for the installation.



CAUTION !!! Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

- 1** Disconnect negative terminals on both batteries.
- 2** Using a 8mm nut driver, loosen clamp securing intake tube to air box (Image 2).
- 3** Using a 8mm nut-driver, loosen clamp securing intake tube to the turbo inlet (Image 2).
- 4** The entire airbox will pull straight up off studs that are attached to the fender (Some trucks may have nuts securing the box to the fender, located under the airfilter (Image 3).
- 5** Using a clean rag, clean turbo inlet sealing surface, be sure to not allow anything into the turbo wheel (Image 4).



IMAGE 1

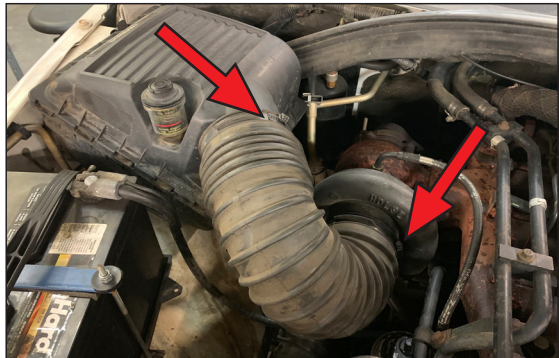


IMAGE 2



IMAGE 3

6 Loosly install Sinister Intake boot and clamps, items C & E (Image 5).

7 Intake support bracket can now be loosely installed on fender stud using items D, G & H (Image 6).

8 Using items A & B, install the filter onto the intake tube, and line up with the previously installed support bracket with item F (Image 6).

9 Start with tightening up the boot clamps and then the hardware for the support bracket. Be sure to only snug the M6 nut onto the fender stud, there needs to be some movement in the grommet (Image 6).

10 Reconnect both batteries.

Start truck and enjoy your new Sinister Diesel Cold Air Intake!



IMAGE 4



IMAGE 5



IMAGE 6



IMAGE 7







#1 IN PERFORMANCE PARTS & KITS

2025 OPPORTUNITY DR. ROSEVILLE, CA 95678 SINISTERDIESEL.COM 888.966.6543