

SINISTER DIESEL




**2003-2010
DODGE CUMMINS
COLD SIDE CHARGE PIPE**



DISCLAIMER

- 1) By installing this product onto your vehicle, you assume all risk and liability associated with its use.
- 2) It is your responsibility to make sure your vehicle complies with all federal, state, and local emissions laws. Federal and many state and local laws prohibit the removal, modification or rendering inoperative of any part of the design affecting emissions or safety on motor vehicles used on a public street or highway. Violation may result in a fine of up to \$32,500 per vehicle (or possibly higher depending on changes in the law). All civil penalties and fines for removing your vehicle's emissions equipment are the sole responsibility of the end user.
- 3) Due to its high performance nature, this product may void vehicle manufacturer's warranty.
- 4) Sinister Mfg Company, Inc. is not responsible for misuse of its products. By installing this product, you release Sinister Mfg Company, Inc. of any and all liability associated with its use.
- 5) Depending on where you live, restrictions may apply. Check all applicable laws before installing or using!
- 6) The purchaser and end user releases, indemnifies, discharges and holds harmless Sinister Mfg Company, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Sinister Mfg Company, Inc. will not be liable for any direct, indirect, consequential, punitive, statutory, or incidental damages or fines caused by the use or installation of this product.

2003-2010 Dodge Cummins Cold Side Charge Pipe

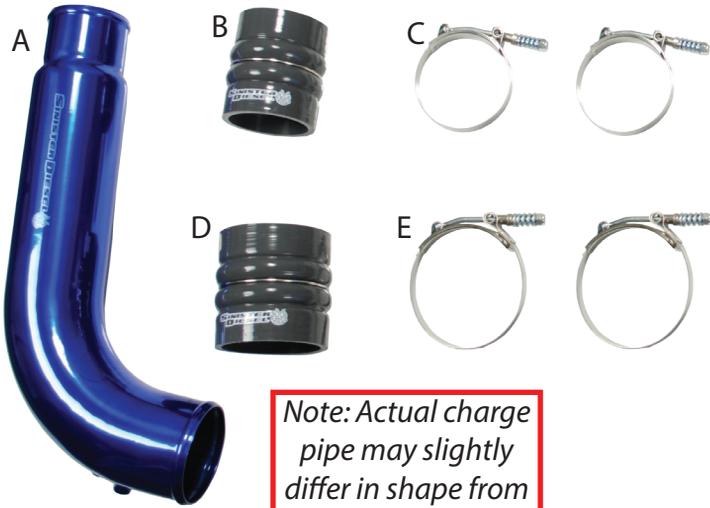

Note: Actual charge pipe may slightly differ in shape from image.

PACKING LIST:

<u>Part#</u>	<u>QTY.</u>	<u>Description</u>
A	1	Cold Side Charge Pipe
B	1	3" ID x 4" L Silicone Boot
C	1	84-92mm Spring Clamps
D	2	3.5" ID x 4" L Silicone Boot
E	1	97-105mm Spring Clamps

Note: 03-07 5.9L Charge pipe kit will have two sets of parts B and C instead of parts D and E.

Read all instructions prior to install.

Note: Prior to installation, please compare the parts that you have received with the bill of materials provided on this page to assure that you have all the parts necessary for the installation.



CAUTION!!! Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

Note: Be sure the inside of your charge pipe is clean and free of any debris. For your safety, we recommend disconnecting any negative battery terminals whenever working on any vehicle.

Step 1: Using an 8mm socket, Philips screw driver, and plastic push pin remover, remove the driver side front fender liner to gain access to the driver side of the engine compartment. (Image 1)



Image 1

Step 2: Using 11mm deep socket, loosen all of the factory spring clamps on the stock charge pipe and remove. (Image2)



Image 2

Note: Image 2 shows the Sinister Charge Pipe already installed.

Step 3: Install the silicone boots onto the charge pipe and place the spring clamps loosely in place. (Image 3)

Note: A small amount of glass cleaner may be used to help slide the boots into place.



Image 3

Step 4: Install the Sinister Cold Side Charge Pipe making sure the spring clamps don't hit or rub on anything. Contact with other components may cause them to wear. *(Image 4)*



Image 4

Step 5: Reinstall the driver front fender liner.



SINISTER DIESEL



SINISTER APPAREL AND DIESEL PRODUCTS



Leveling Kit



Fuel Tank Sump

DODGE CUMMINS PRODUCTS



Coolant Filtration Kit



Fuel Rail Race Valve



Steering Stabilizer



Sinister Diesel EGR Cooler



Throttle Valve Delete



2025 Opportunity Dr.
Roseville CA, 95678
877-692-4110 - SinisterDiesel.com